



Toolbar installation instructions


1 Fix posts to desk

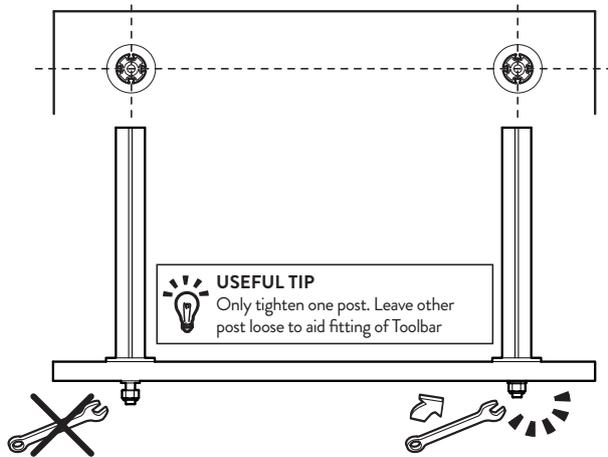


2 Prepare Toolbar

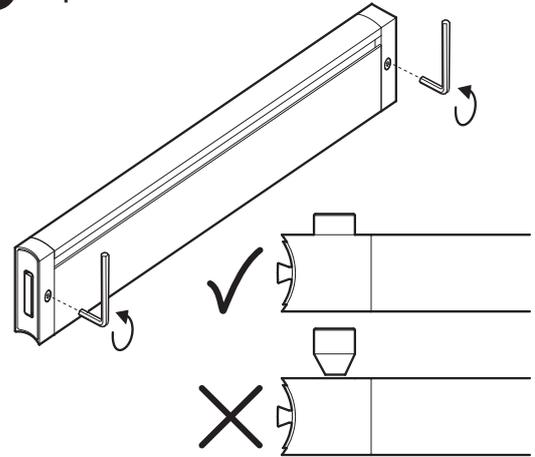


3 Fit Toolbar to posts

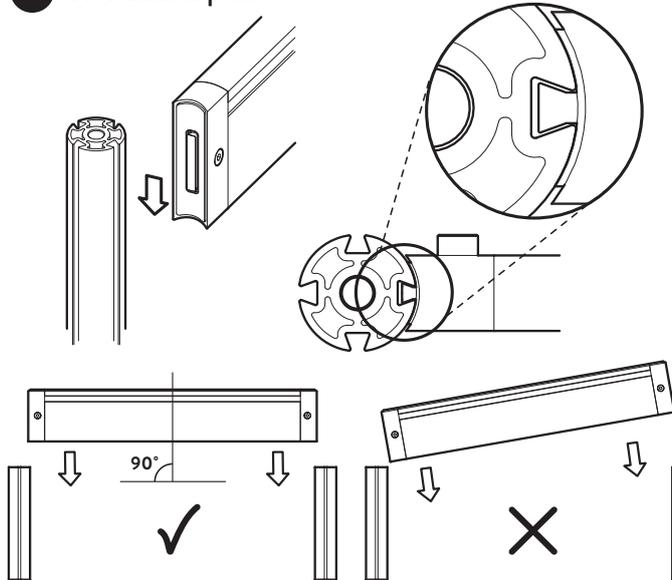

4 Secure Toolbar

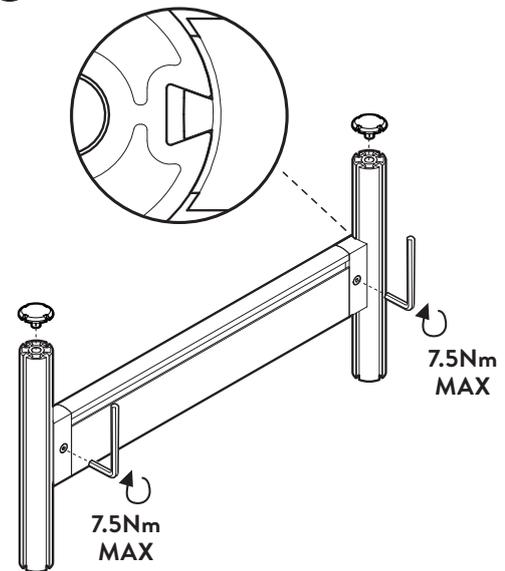

5 Tighten post mounts

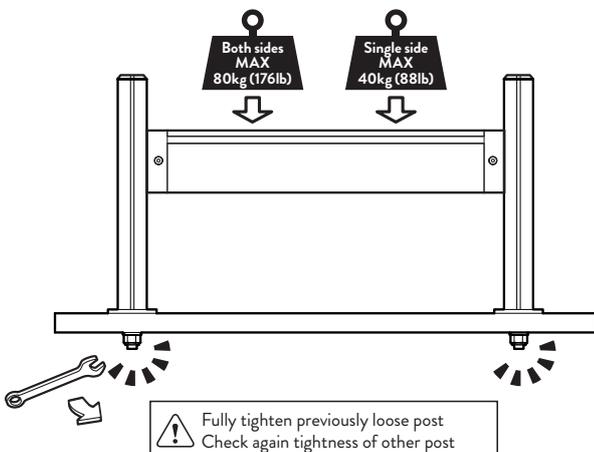

⚠ WARNING

- Ensure desk / work surface / wall / partition is suitable to take the weight of the arm/s, monitors and toolbar/s.
- Do not use this product for any purpose other than that for which it was designed.
- Supported weight must not exceed 80Kg total (or 40Kg per side).
- Hold the toolbar or monitor/s tightly when making adjustments.
- Care should be taken to avoid trapping fingers.
- Do not dismantle or remodel the toolbar.
- Ensure toolbar is fully tightened (7.5Nm MAX) to posts before attaching arm/s and monitor/s.
- Do not use power tools to tighten toolbar clamp screws.
- Do not attach any arm/s or monitor/s before assembling toolbar to post.
- Check tightness of toolbar to post clamp screws after 24hours of initial installation and at periodic intervals.
- Screws for screen/s are not provided, please contact your monitor provider.

⚠ MAINTENANCE and INSPECTION

- Ensure all screws are tightened and occasionally adjust if needed.
- Clean with a damp cloth, NO solvents.

⚠ DISCLAIMERS

- The use of power tools, lever bars or excessive force during the installation, or reconfiguration of the product will invalidate your guarantee.
- Failure to observe the recommendations in the use, and configuration of these products may affect your guarantee.